




READ CAREFULLY

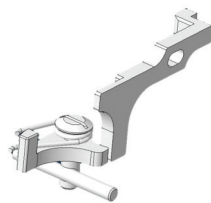

CSV-9 WITH MECHANISM BLOCKING THE POSSIBILITY OF A SHOT WHEN THE BUTT/STOCK IS LOWERED

READ INSTRUCTIONS FOR USE

listed on the website www.csv-9.com
in the SUPPORT section / "CSV-9 operating instructions - Ukraine"



<https://csv-9.com/wp-content/uploads/2023/05/czechweaponsA5-CSV-9-navod-EN-9x21-Ukrajina.pdf>

SAFETY INSTRUCTIONS

Your capability of safe weapon handling should be proven by your gun licence. In order of your own safety and of your surroundings always pay attention and follow safety instructions for weapon handling.

- Always handle a weapon as if it is loaded
- Do not trust anyone saying that the weapon is not loaded
- Never aim at anything you do not intend to shoot
- Use appropriate ear and eye protectors (protective shooting goggles) during shooting
- Never use the weapon for any purpose other than shooting
- Do not leave a loaded weapon unattended
- Before putting weapon down or handing weapon over to another person, make sure that it is not loaded
- Store the weapon unloaded and with decocked firing mechanism
- Use only undamaged, dry, clean and original ammunition in good condition, high quality ammunition – caliber 9mm Luger according to C.I.P. standard
- Before loading, make sure that the bore of barrel, the chamber and the bolt are clean, without obstacles and that the weapon is undamaged
- After shooting clean the weapon as soon as possible
- When the weapon is loaded and cocked, keep the safety catch on until you are ready to fire
- Do not block the ejection port and make sure that nobody is a hindrance in the direction of the ejected cartridge
- During shooting – hold the weapon with the prescribed grip on the handguard, do not put your hand in front of the barrel; do not hold the weapon by the magazine or rest the weapon against the magazine
- Do not pull the trigger or do not put your fingers into the trigger guard unless you aim at the target and are ready to fire
- Never shoot at hard surface such as stone or water level
- Do not shoot near an animal if it is not trained for this noise
- Before you press the trigger, once again check your target and the space behind it
- Before cleaning, storing, carrying any or other weapon handling not directly associated with the shooting, make sure the weapon is not loaded
- If a shot fails, hold the weapon aimed at the target or at the safe place for at least 30 seconds to 1 minute. If there is no firing, remove the cartridge from the chamber and examine it. If there is a indent mark from the striker, then the cartridge has to be disposed of by a specialist and weapon has to be checked by specialist before the next shooting
- Never modify the weapon components. This may cause serious damage to its function and safety
- Corrosion, the use of defective cartridges, the fall on hard surface and other rough handling, can cause a damage that is not visible at a first glance. If this happens the weapon has to be checked by an expert gunsmith.
- Keep the weapon and ammunition separately in a locked area, away from unauthorized persons and children

During any manipulation, we always treat the weapon as if it were loaded. It is **FORBIDDEN** to manually insert a cartridge into the chamber or otherwise load the weapon while the butt/stock is lowered. It is **FORBIDDEN** to move the bolt in its full track with the butt/stock lowered.


NOTE

The mechanism blocking the possibility of firing with the butt/stock down does not allow full rearward movement of the bolt. If there is rapid movement or forced pressure on the bolt in this position, the weapon may be damaged. A visual inspection of the cartridge chamber is permitted by moving/opening the bolt back **MAXIMUM 5 mm**. (fig. 1) It is necessary to make sure that the weapon is unloaded (or the cartridge chamber is empty) before lowering the butt/stock.



DISASSEMBLY

Disassembly can only be performed if the magazine is removed from the weapon, the weapon is unloaded, the firing pin is released, and the butt/stock is open. By turning the stock by 90°, it is possible to remove the butt/stock from the weapon. With the butt/stock already removed, all handling of the bolt is permitted and possible only if the fuse clamp button of the shot blocking located at the rear of the weapon is pressed as shown in picture no. (fig. 2)

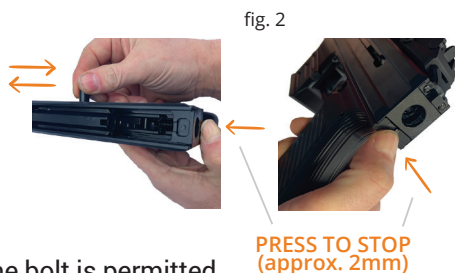

3 PRESS TO STOP (approx. 2mm)



4 pull the trigger - move the striker to the front position

Next, we proceed according to the Instructions for use, section DISASSEMBLY. REASSEMBLY is carried out in the opposite way to disassembly – where when manually moving the firing pin forward (as shown in Fig. 14 in the REASSEMBLY section), it is again necessary to press the fuse clamp button before pressing the trigger. (fig. 3) If the firing pin is stuck on its firing pin catch by inexperienced handling that does not respect these instructions, it is possible to release it to the front position by pushing the projection of the fuse clamp – with greater force or by opening the butt/stock. This manipulation can only be performed under the conditions specified in the Instructions for use, section **SAFETY INSTRUCTIONS**.

PRODUCED BY: